

INSTALLATION INSTRUCTION

QUARTUS ATMOSPHERE 2" - Round Trim

A1RS-D46M, D47M-C2; A1RS-A46M, A47M-C2; A1RS-W46A, W47A-C2



WARNING

IMPORTANT: NEVER attempt to do any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT: Coupez l'électricité avant TOUTE manipulation.


- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).

CAUTION

All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction may invalidate the ETL/cETL listing of this fixture.


TRIM MODEL:

Trims A1RS-D46M, A1RS-A46M and A1RS-W46A (**Fig. A**) and trimless trims A1RS-D47M, A1RS-A47M and A1RS-W47A (**Fig. B**) can be used with new construction housings. Refer to specification sheets for compatible housings and follow appropriate housing instructions to begin installation.

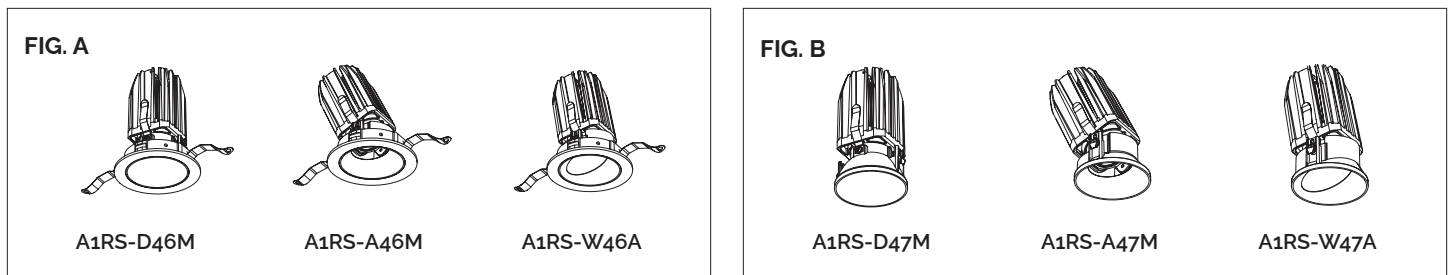

TRIM INSTALLATION (Applies to A1RS-D46M (featured in all figures) , A1RS-A46M, A1RS-W46A)

1. Raise trim assembly to ceiling cutout and connect power connector and safety cable (See **FIG.1**).
2. Fold trim assembly mounting springs inward and insert trim assembly into ceiling cutout. Be sure once installed, trim assembly is flush and secure (See **FIG. 2 & 3**).

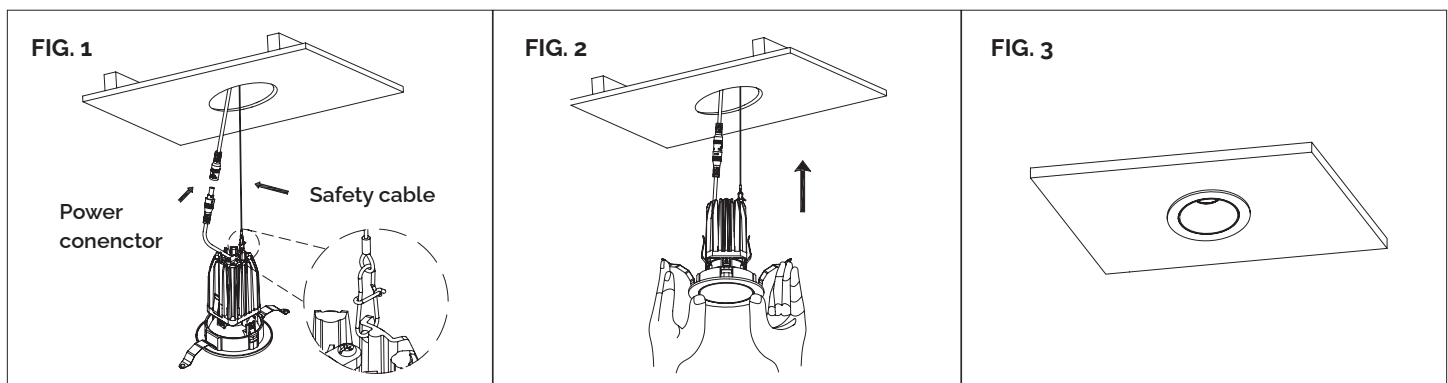

aispire.com
Phone (800) 526.2588
Fax (800) 526.2585

Headquarters
44 Harbor Park Drive,
Port Washington, NY 11050

Georgia Distribution Center
1600 Distribution Ct.
Lithia Springs, GA 30122

Texas Distribution Center
1700 S J Elmer Weaver Fwy Suite 100,
Cedar Hill, TX 75104

California Distribution Center
1750 S Archibald Ave,
Ontario, CA 91761

INSTALLATION INSTRUCTION


QUARTUS ATMOSPHERE 2" - Round Trim

A1RS-D46M, D47M-C2; A1RS-A46M, A47M-C2; A1RS-W46A, W47A-C2




TRIMLESS TRIM INSTALLATION (Applies to A1RS-D47M (featured in all figures) , A1RS-A47M, A1RS-W47A)

1. Raise trim assembly to ceiling cutout and connect power connector and safety cable (See FIG.4).
2. Insert trim assembly into ceiling spackle ring and engage the trim with spackle ring properly and flush to the ceiling (See FIG. 5, 6).

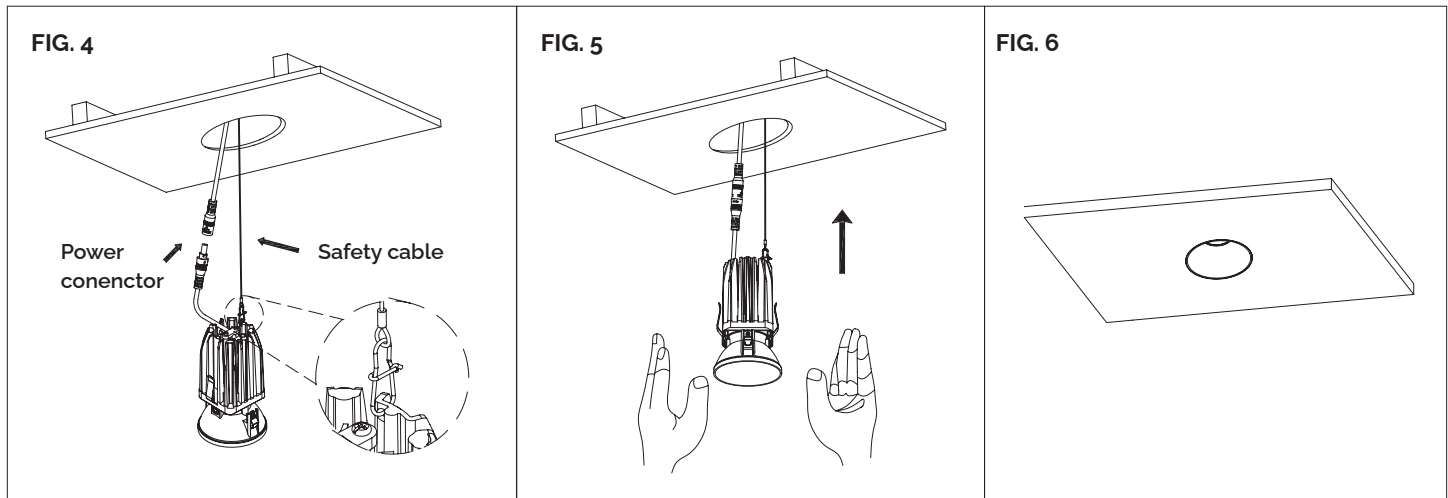

REFLECTOR REPLACEMENT AND ACCESSORY INSTALLATION

1. Remove heatsink from trim assembly (See FIG.7).
2. Remove the reflector and the clip (the reflector kit) from the top of the trim. Separate the reflector from the clip and dispose the removed reflector.
3. Select the replacement reflector and insert it to the clip (See FIG. 8).
4. Place one accessory into the trim opening (optional) and insert the reflector kit to the trim top (See FIG. 9).
5. Reinstall heatsink and trim assembly .

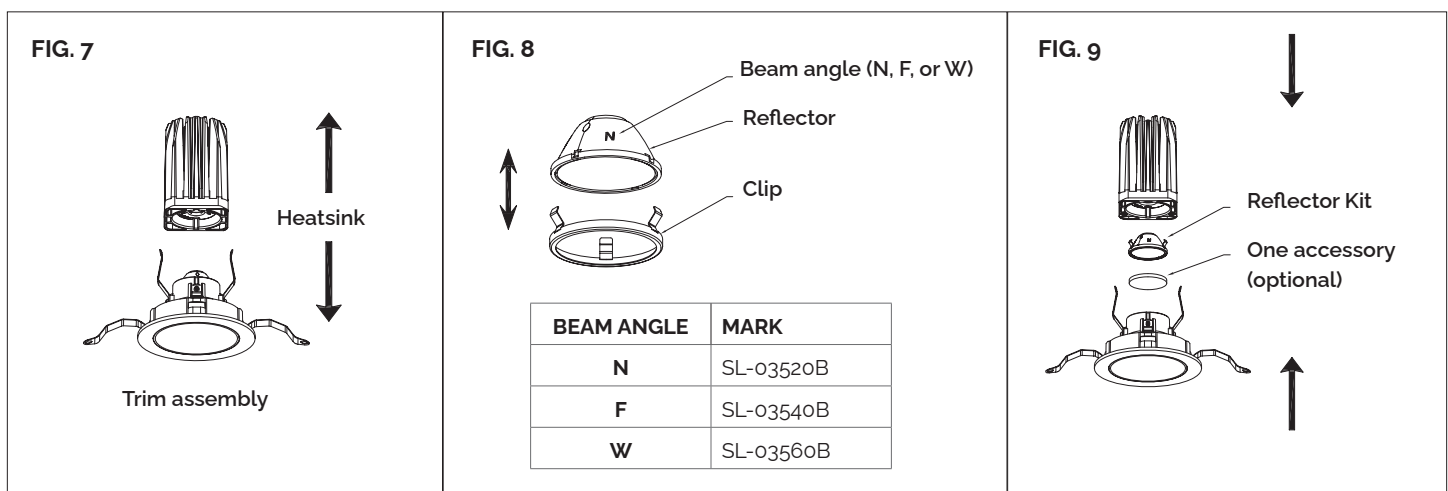

aispire.com

Phone (800) 526.2588

Fax (800) 526.2585

Headquarters

44 Harbor Park Drive,
Port Washington, NY 11050

Georgia Distribution Center

1600 Distribution Ct,
Lithia Springs, GA 30122

Texas Distribution Center

1700 S J Elmer Weaver Fwy Suite 100,
Cedar Hill, TX 75104

California Distribution Center

1750 S Archibald Ave,
Ontario, CA 91761

INSTALLATION INSTRUCTION


QUARTUS ATMOSPHERE 2" - Round Trim

A1RS-D46M, D47M-C2; A1RS-A46M, A47M-C2; A1RS-W46A, W47A-C2



REPLACE THE LED ENGINE

1. Power off fixture and let fixture cool down.
2. Remove the trim assembly from the ceiling (See **FIG. 10**).
3. Disconnect wire connector and safety cable (See **FIG. 11**).
4. Remove the light engine from the trim assembly (See **FIG. 12**).
5. Install the new engine on the trim (See **FIG. 13**).
6. Connect power connector and safety cable, then reinstall the trim assembly inside fixture to complete (See **FIG. 14**).

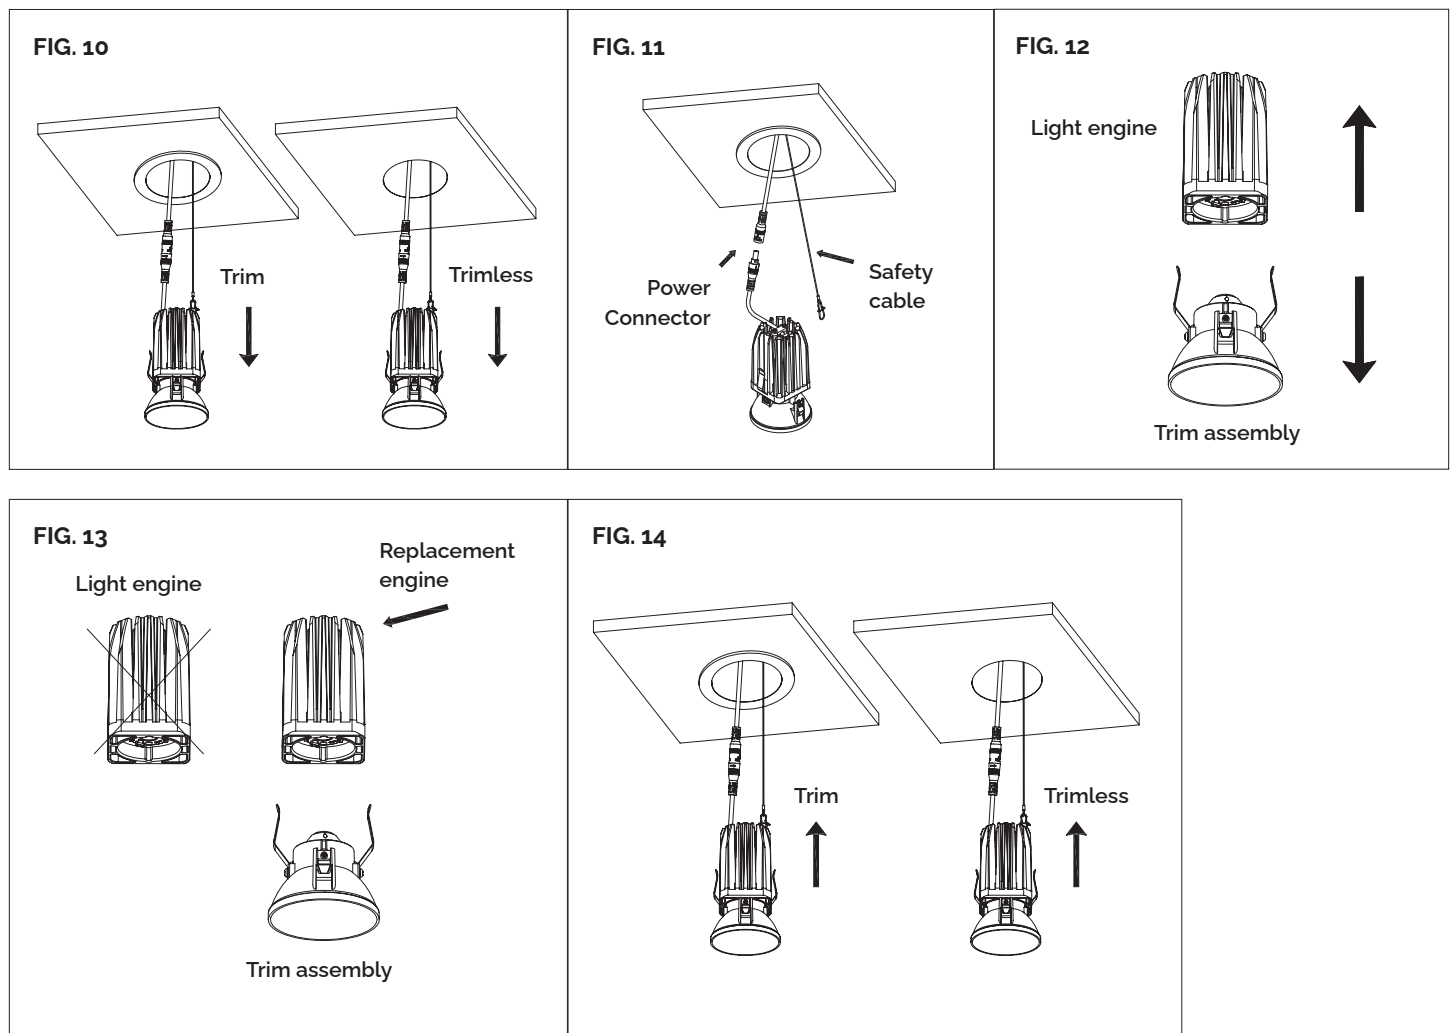

INSTALLATION INSTRUCTION

QUARTUS ATMOSPHERE 2" - Round Trim

A1RS-D46M, D47M-C2; A1RS-A46M, A47M-C2; A1RS-W46A, W47A-C2



ADJUSTABLE TRIM (APPLIES TO A1RS-A46M (FEATURED IN ALL FIGURES), A1RS-A47M)

1. Horizontal Angle Adjustment

Grip the top edge of the adjustable trim and gently rotate the trim to the desired direction (See **FIG. 15**).

FIG. 15



2. Vertical Angle Adjustment

Use a finger to reach the reflector ring and gently push forward or backward to achieve the desired tilting angle (See **FIG. 16**).
For achieving the maximal tilting angle, adjust trim flange orientation to ensure the two mounting springs don't interfere with vertical tilting (See **FIG. 17**).

FIG. 16


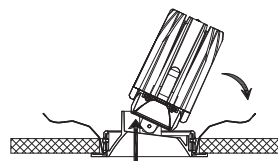


FIG. 17

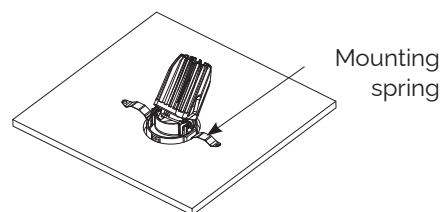


WALL WASH TRIM (APPLIES TO A1RS-W46A (FEATURED IN ALL FIGURES), A1RS-W47A)

1. Aiming Wall Wash Trim to the desired Wall

Rotate the the Wall Wash trim to have the sloped lens facing the lighted wall (See **FIG. 18**).

FIG. 18

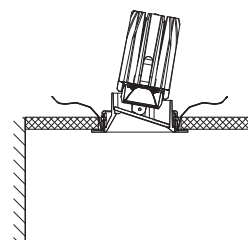

2. Remove Wall Wash Trim From Fixture

Insert the tip of a small flat screw driver into the notch on the top the trim and gently pull down the trim (See **FIG. 19**).
Take care or add protection padding to avoid damaging trim finish.

FIG. 19

