

INSTALLATION INSTRUCTION

Atmosphere 4.5" - Remodel Housing Trimless

A1RB-347, A1RB-357



SAFETY INSTRUCTION

IMPORTANT: Never attempt any work without shutting off the electricity.

- Read all instructions before installing.
- System is intended for installation by a qualified electrician in accordance with the National Electrical Code and local regulations.
- Go to the main fuse box, or circuit breaker. Place the main power switch in the "OFF" position and unscrew the fuse(s) or switch "OFF" the circuit breaker switch(es) that control the power to the fixture or room that you are working on.
- Place the wall switch in the "OFF" position.

AVERTISSEMENT

IMPORTANT : Coupez l'électricité avant TOUTE manipulation.

- Lisez toutes les instructions avant d'installer.
- Système est destiné à être installé par un électricien qualifié en conformité avec le code national de l'électricité et les règlements locaux.
- Accédez au panneau central de disjoncteurs ou de fusibles de votre demeure et placez l'interrupteur principal en position d'arrêt (« OFF »).
- Placez l'interrupteur mural en position d'arrêt (« OFF »).


CAUTION:

All parts must be used as indicated in these instructions. Do not substitute any parts, leave parts out, or use any parts that are worn out or broken. Failure to follow this instruction could invalidate the ETL/cETL listing of this fixture.

OVERVIEW:

Housing is remodel Non-IC. Housing requires a trim for finished look. Refer to specification sheets for compatible trim options.

OVERALL HOUSING DIMENSION

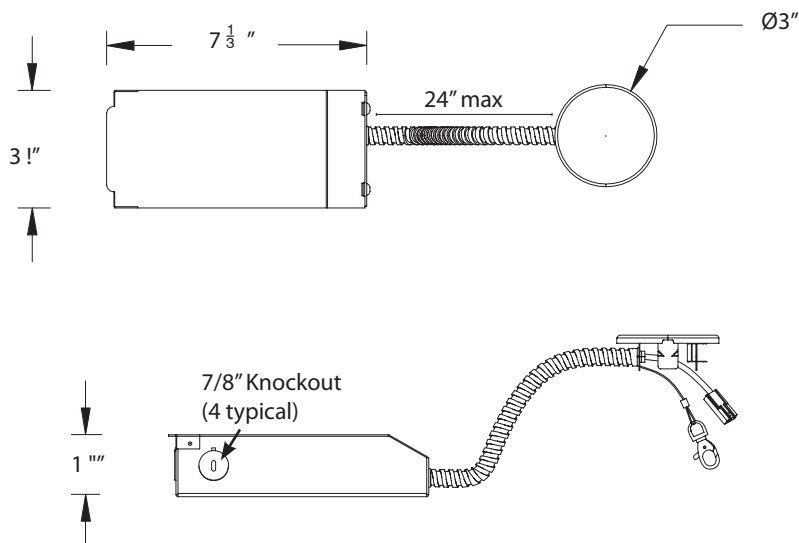

SPECIFICATIONS	
Input:	120-277V, 50/60Hz
Installation:	Non-IC
Dimming	DMX for CT-X model 0-10V for CT-Z model

AISPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.

INSTALLATION INSTRUCTION

Atmosphere 4.5" - Remodel Housing Trimless

A1RB-347, A1RB-357

FIG. 1

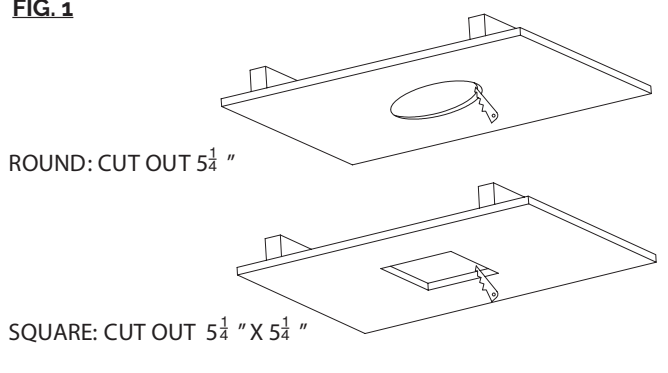


FIG. 2

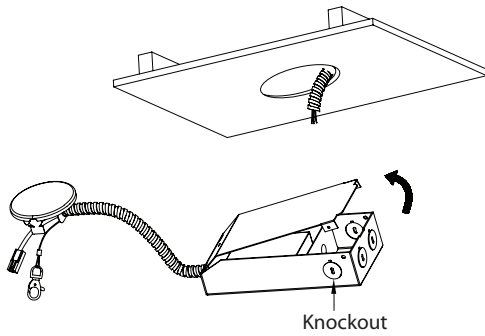


FIG. 3


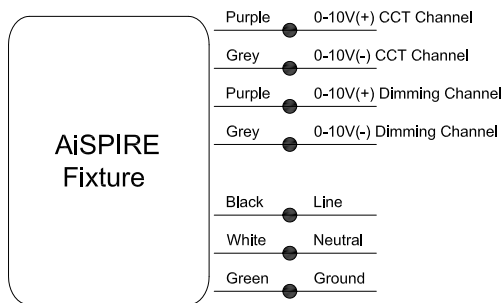


FIG. 4

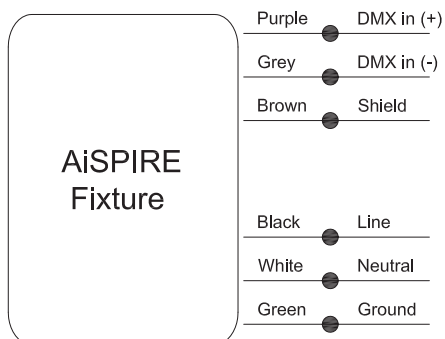

HOUSING INSTALLATION:

- At the point of installation, cut a 5 1/8" round hole for a round trim or a 5 1/8" X 5 1/8" square hole for a square trim (See **FIG. 1**).

Note: Ceiling thickness table below.

Trim Model	Trim Model	Trim Description	Ceiling Thickness	
			1/2"	1"
A1RB-347 A1RB-357	A1RB-D	Downlight	Yes	Yes
	A1RB-S	Shallow Regressed Downlight	Yes	Yes
	A1RB-A	Adjustable	Yes	Yes
	A1RB-W	Wall Wash	Yes	Yes

- Pull building supply wires through ceiling cutout and open fixture junction box door (See **FIG. 2**).

Remove desired housing knockout and feed building wires into housing using appropriate connector.

- Connect fixture wires to building wires: insert each supply wire into appropriate connector.

- For 0-10V control [**CT-Z** models] (See **FIG. 3**): Two 0-10V input signals are used to achieve CCT and intensity changing. Recommended maximum of 500ft of 18 ga 0-10V communication wiring.
- For DMX control [**CT-X** models] (See **FIG. 4**): Two DMX input channels are used to achieve CCT and intensity changing. Factory default Channel 1 is CCT changing and Channel 2 is intensity changing. If differing channels are desired in the field, use of a RDM compatible control console can reassign channels.

It is recommended to use cable specifically designed for DMX. These cables have an impedance of 120Ω and a low capacitance. For instance: Belden 9841 or 3105a. At the last fixture, the cable to be terminated with a 120Ω resistor between the DMX (+) and DMX (-) pinouts to prevent reflections of the signal. The resistor value of the resistor on the last driver should be kept the same as the resistor of signal wires.


Recommended maximum of 500ft of cabling from controller to last fixture.
After 32 unit loads a repeater/booster is recommended.

INSTALLATION INSTRUCTION


Atmosphere 4.5" - Remodel Housing Trimless

A1RB-347, A1RB-357

AiSPIRE
A W A C C O M P A N Y

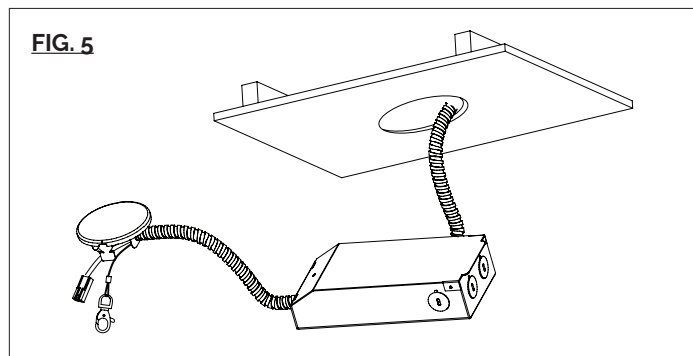



- Place all wiring and connectors back in junction box and replace the junction box's cover (See **FIG. 5**).

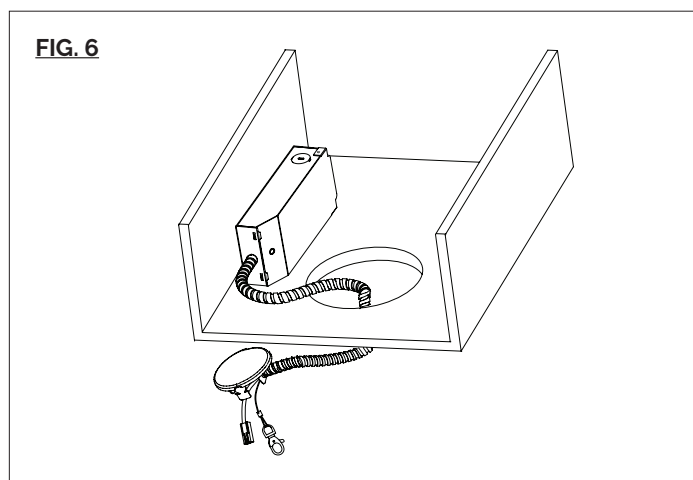



- Guide junction box through the cut hole and secure appropriately. (See **FIG. 6**).

Round

Square

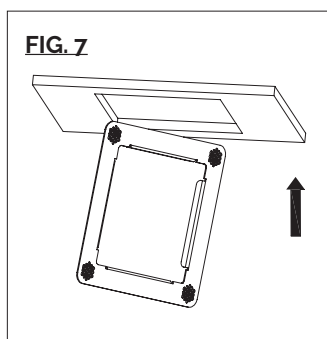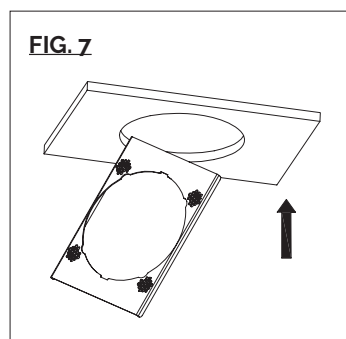

- Insert upper frame through ceiling opening. Angling maybe required (See **FIG. 7**).

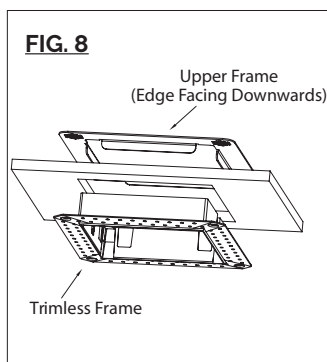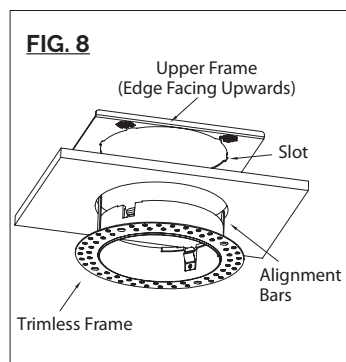

- Raise trimless frame to ceiling cut out and insert alignment bars into upper frame alignment slots (See **FIG. 8**).

AiSPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.


INSTALLATION INSTRUCTION

Atmosphere 4.5" - Remodel Housing Trimless






A1RB-347, A1RB-357

AiSPIRE
A W A C C O M P A N Y

Round

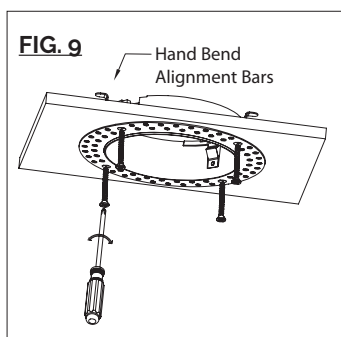

Square

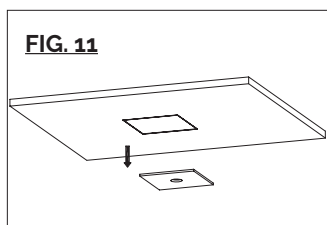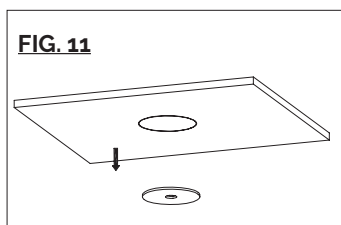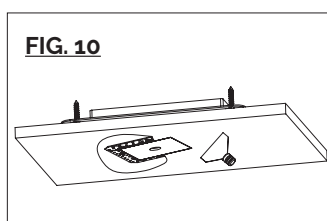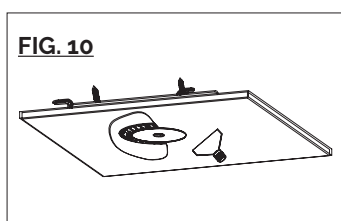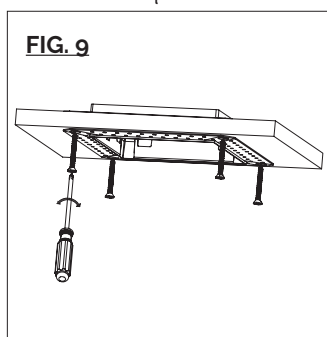

8. For Round Only: With upper frame and trimless frame flush with both ceiling surfaces, hand bend the alignment bars parallel to ceiling (See **FIG. 9**).
9. Insert four provided screws (short screws for up to 2" ceiling and long screws for up to 1" ceiling thickness) through countersink holes on trimless frame, through ceiling and into holes in upper frame. Do not over tighten screws (See **FIG. 9**).
10. Insert plaster shield inside trim opening. Apply plaster or spackle over invisible trim frame and sand surface dry for finished look (See **FIG. 10**).
11. Remove the plaster shield when finishing is complete (See **FIG. 11**).
12. Refer to installation instructions for appropriate trim to complete the installation.

AiSPIRE retains the right to modify the design of our products at any time as part of the company's continuous improvement program.